



Track Channel Installation Guide

Recessed Installation

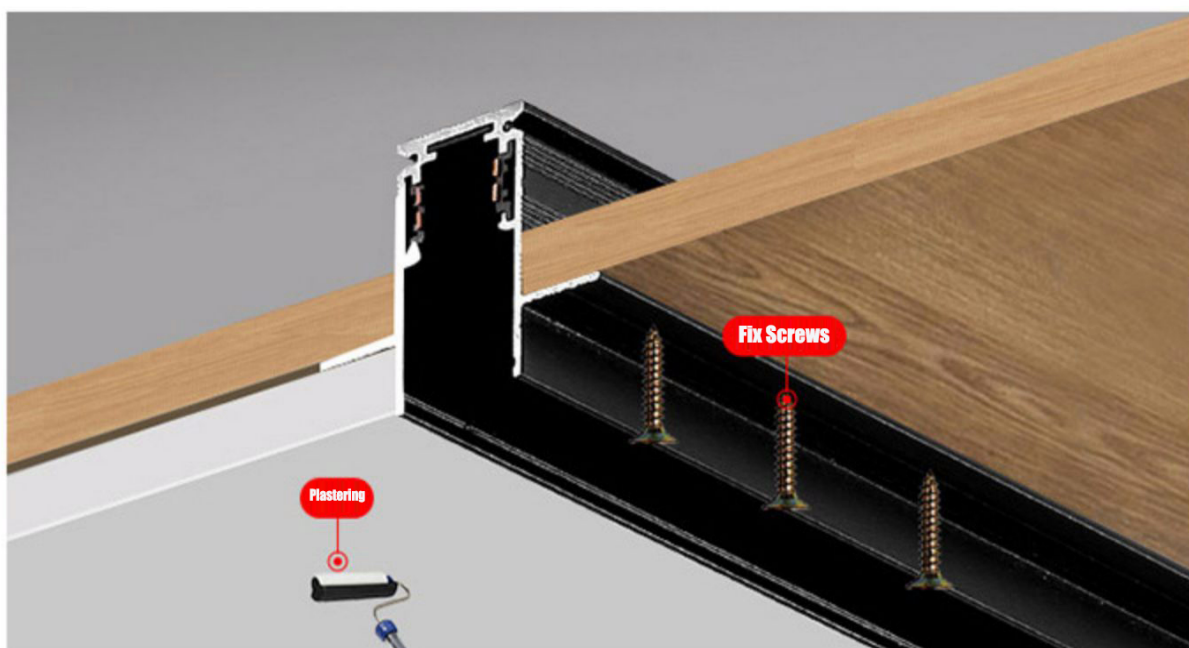


1 Open a slot in the ceiling

The opening slot size should > 35mm wide, and from ceiling to the roof should be at least 55mm. That's to say the depth of slot should > 55mm.

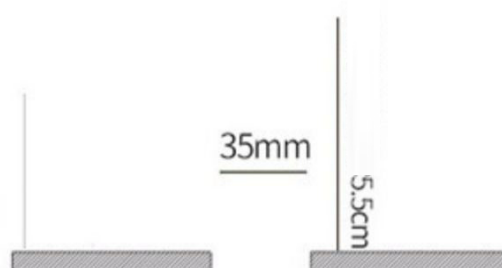


2 Recess the magnetic track channel into the slot

Fix them tightly with screws to the ceiling.

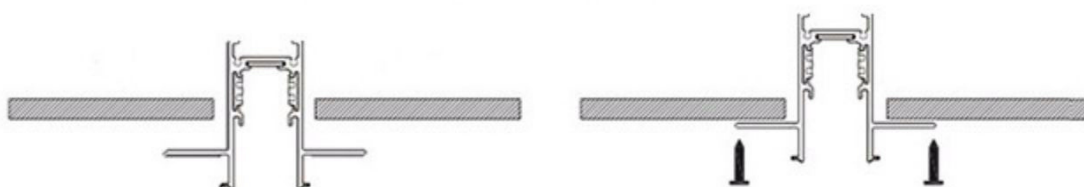


3 Cover the gypsum board on

Cover fixed board or gypsum board under the track channel. Should keep the height of the cover board and the bottom of the track channel on the same level. Plastering the seam between covering board and track.

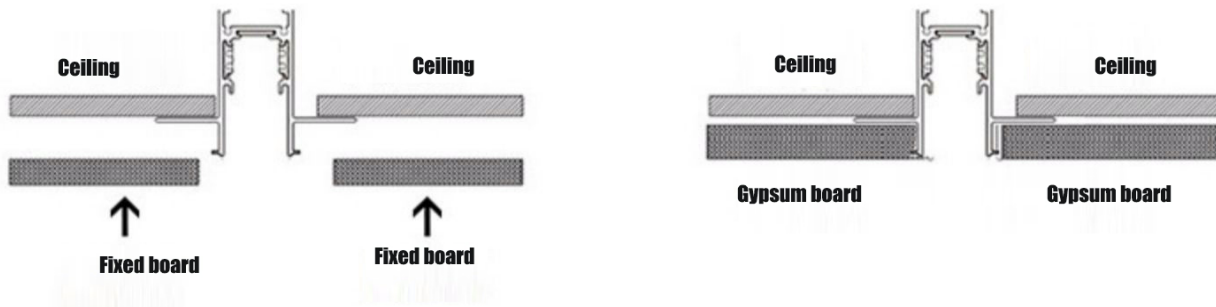


Recessed Installation(Plastering)

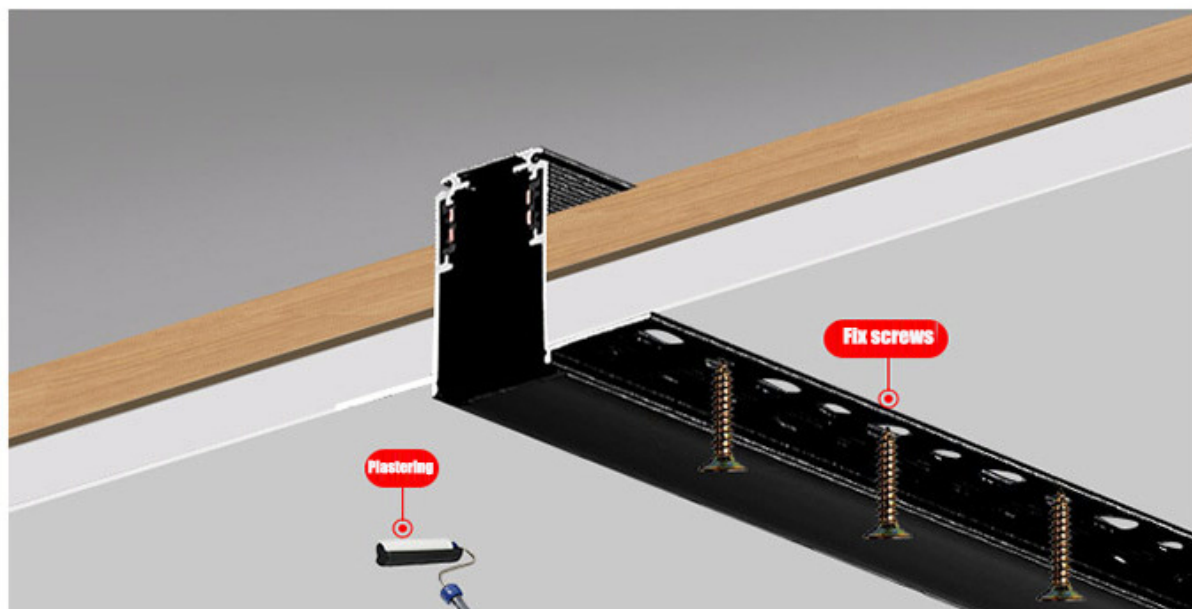

① Open a slot in the ceiling



The opening slot size should > 35mm wide, and from ceiling to the roof should be at least 55mm. That's to say the depth of slot should > 55mm.

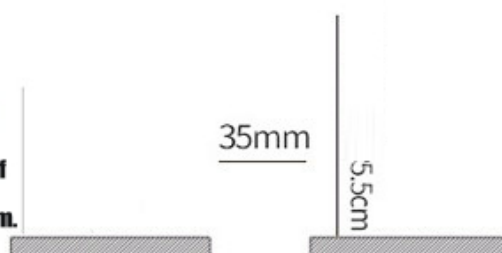


② Recess the track channel in the slot and plaster

Fix the track channel firmly by screws. Make the painting 2-3 times until

no seam between the covering board and tracks

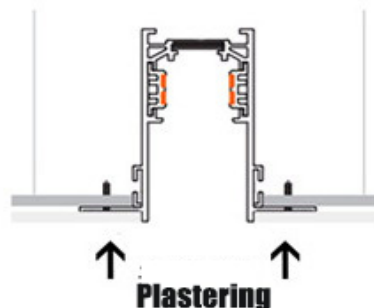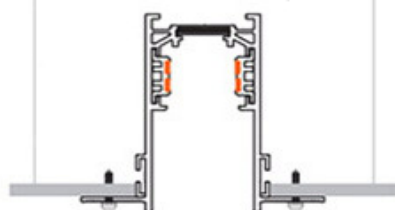


Surface-Mounted Installation

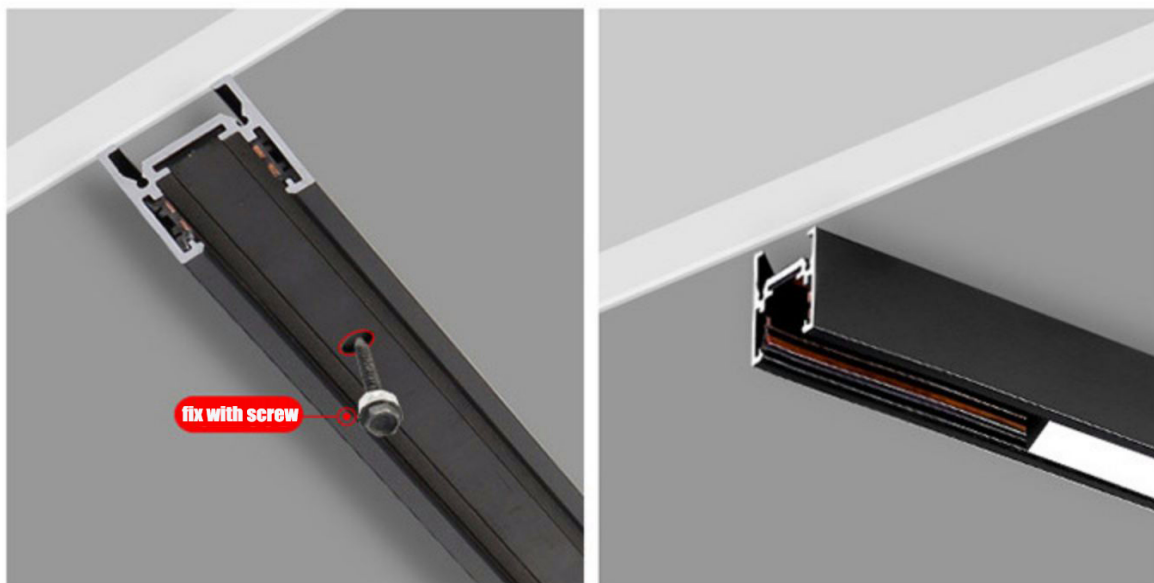


1 Drill a hole to install the expansion bolt on the ceiling

Drill a hole on the ceiling with the same size as expansion bolt. The depth of hole is same as the expansion bolt.
Then insert the expansion bolt into the hole.

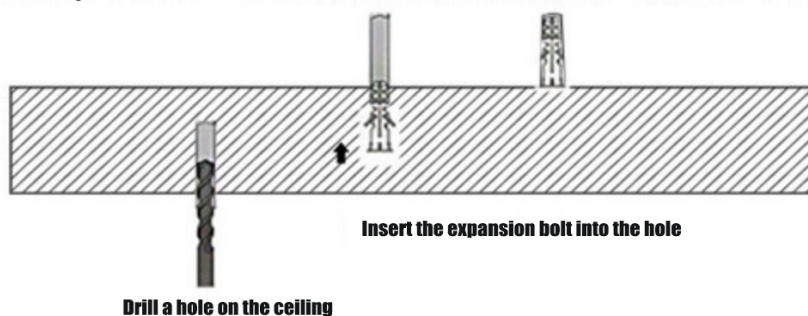


2 Fix the track channels on the ceiling

Fix the track on the ceiling by screws and the screws insert into the expansion bolts firmly.

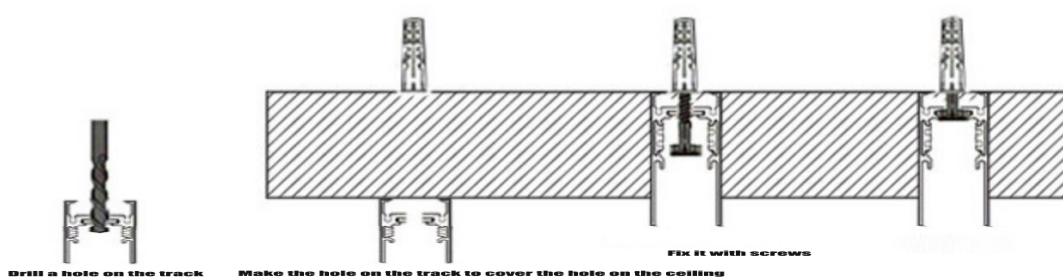


Suspension Installation

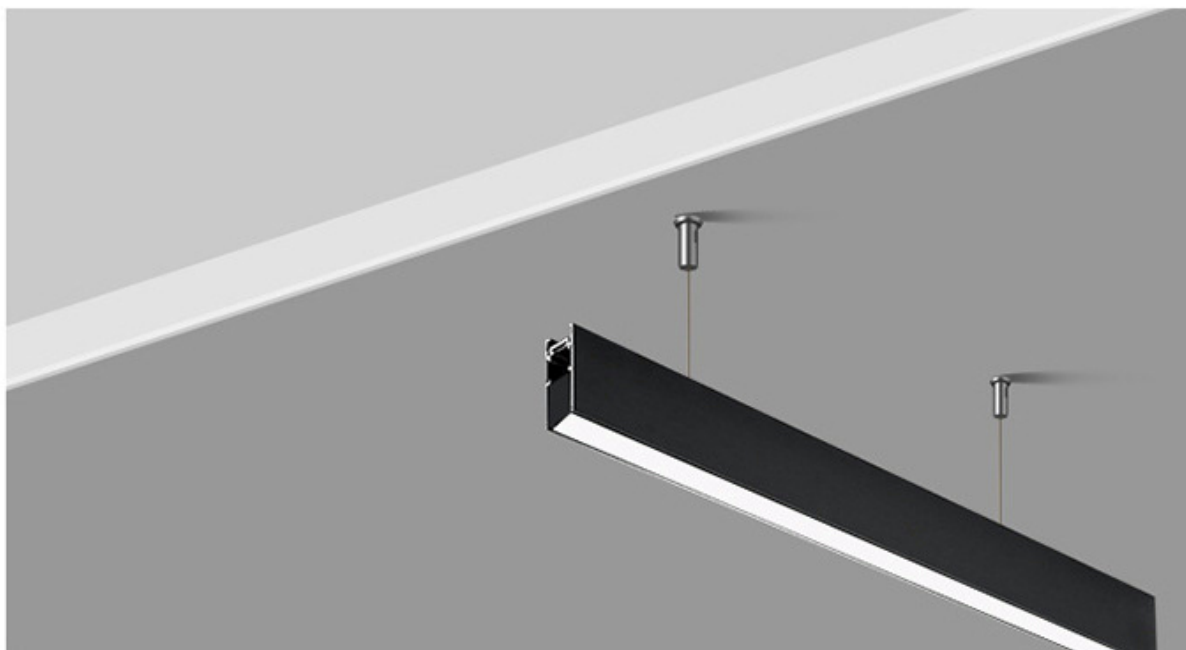

① Drill a hole to install the expansion bolt on the ceiling

Drill a hole on the ceiling with the same size as expansion bolt. The depth of hole is same as the expansion bolt. Then insert the expansion bolt into the hole.

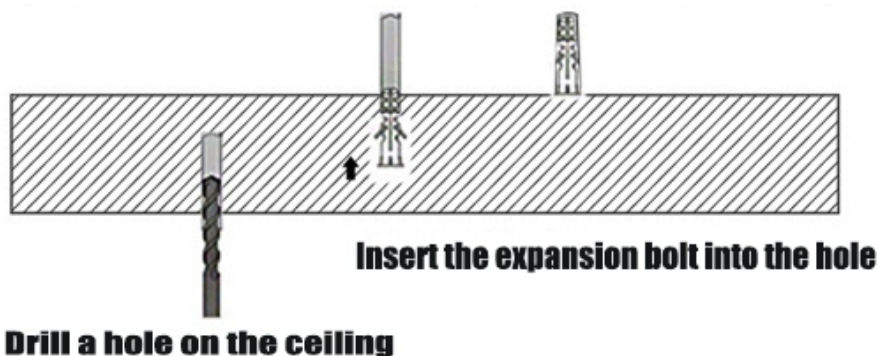

② Fix suspension cable on the ceiling

Fix the suspension cable or rod to the expansion bolt tightly.